

LOADING INSTRUCTIONS

Bottles should be placed on the shelves with cap towards front of cooler.

ADJUSTMENT

Adjustment for bottle length is the only adjustment required. This is done by placing the inclined shelves in the proper slots.

BOTTLE LENGTH

SLOTS USED

7-3/8 to 7-7/8

Front slots

7-7/8 to 8-3/8

2nd from Front

8-3/8 to 8-7/8

3rd from Front

8-7/8 to 9-3/8

4th from Front

9-3/8 to 9-7/8

Back slots